

## 1 Year Limited Warranty

Course Housewares, LLC warrants this product to be free from manufacturer defect for up to 1 year from the original date of purchase. If a defect is found to exist, Course Housewares will, at its option, either repair or replace the product or the defective component, including labor. Replacement will be made with new or rebuilt product or components. This warranty does NOT cover (a) ordinary wear and tear (such as scratches, dents or stains), (b) impact damage or breakage, (c) heat discoloration, minor imperfections and slight color variations which are a normal part of the craftsmanship, (d) improper cleaning methods causing scratches, or (e) any unit that has been tampered with, (f) damages incurred through improper use and care and (g) faulty packaging by you or mishandling by any common carrier. Failure to follow the accompanying Care and Use instructions or commercial use will void this warranty.

Course Housewares' sole obligation and your exclusive remedy under this warranty is limited to repair or replacement, at its option, of the defective Induction Burner. You will be responsible for any shipping and handling fees. Products returned to us that are not found to be defective in material or workmanship will be returned to you. If your particular product is found defective but is no longer available and cannot be repaired, a comparable product, at our discretion, will be sent as a replacement. This warranty extends only to the product's original purchaser, US residents only and does not cover damage caused by improper use or accidental damage. This warranty covers the Induction Cooktop only.

COURSE HOUSEWARES, LLC., MAKES NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, REGARDING THE PRODUCT OR RELATING TO ITS QUALITY, PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, COURSE HOUSEWARES, LLC SHALL NOT BE LIABLE FOR INDIRECT, CONSEQUENTIAL OR SPECIAL DAMAGES WHETHER A CLAIM IS BASED ON CONTRACT, TORT, WARRANTY OR OTHERWISE, IN NO EVENT WILL LIABILITY EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. THE DURATION OF ANY IMPLIED WARRANTY WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN. COURSE HOUSEWARES SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights, which vary from State to State.

To Process a claim:

Do not return the product to the retailer from which it was purchased. Your retailer has no liability for this warranty. Please contact Course Housewares' customer service department for assistance and to ensure the fastest possible resolution to the problem. Please have your purchase information available to speed this process.

OR

Send your name, physical address, phone number, original purchase receipt and the safely packaged item prepaid to:

Course Housewares, LLC  
1715 Lake Drive West  
Chanhassen, MN 55317

(866) 325-1659

Return shipping and handling charges may apply.

MADE IN CHINA





## PLEASE READ BEFORE USE AND SAVE THESE INSTRUCTIONS

Thank you for purchasing the Paula Deen Induction Cooktop. This Cooktop will perform best when used as intended. To ensure the best performance of your Induction Cooktop please follow these instructions.

### BEFORE FIRST USE

Before using, check the Induction Cooktop for scratches or crack's and check the power cord for any breakages.

### INDUCTION COOKTOP CARE & USE


- Do not submerge Induction Cooktop in any liquid.
- Never use abrasive or harsh cleaners.
- When cleaning, unplug the Induction Cooktop.
- When not in use, unplug the Induction Cooktop.
- To clean, wipe with wet cloth or sponge with soapy water. Towel dry.
- Maintain a clean cooktop surface to ensure even cooking.
- Do not allow your cookware to “boil dry” as this can damage the cookware.
- Please note there is small compartment located on the bottom of the unit that has no function and may be used as storage.

### IMPORTANT SAFEGUARDS:

- Keep away from pets and children
- Never use Induction Cooktop on top of hot surfaces.
- Do not place metal utensils on cooking surface, as they will get hot.
- Do not touch any hot surface.
- Do not allow the power cord to touch hot surfaces.

## OPERATING INSTRUCTIONS

- Place induction Cooktop on a level surface.
- Induction Cooktop only works when compatible cookware is placed on the Cooktop.
- Unplug Induction Cooktop when not in use.
- Plug Induction Cooktop into socket. The Induction Cooktop will beep to indicate it is plugged in. The POWER button will light up. Touch the POWER button to turn Induction Cooktop ON. Touch POWER button again to turn OFF.
- When ON, use intended function for your needs (Manual, Warm, Low, Medium, High, Boil, Max, Timer/Preset). Touch POWER button again to turn OFF.
- To use, turn ON and select function by touching function button until desired selection is reached. Touch POWER button again to turn OFF.
- To manually adjust the temperature, touch the function button to select MANUAL, BOIL or MAX and then use the (+) and (-) buttons to adjust to desired temperature. Touch POWER button again to turn OFF.
- To lock the screen, touch and hold the lock button and LED display will show LOC. To unlock the screen, touch and hold the lock button and the LED display will no longer show LOC. Touch POWER button again to turn OFF.
- TIMER: First, choose the MANUAL, BOIL, or MAX function. Adjust to the desired temperature by pressing (+) or (-) buttons. After selecting desired function and temperature, touch the TIMER/PRESET button. Adjust timer with (+) or (-) buttons until desired time is reached. The display area will blink for a few seconds while your Induction Cooktop is setting the desired amount of time. The timer will automatically start counting down. You will see the display section show the temperature and timer intermittently. The timer can go up to 6 hours. When the timer is up, your Induction Cooktop will automatically shut off.
- PRESET: First, choose the WARM, MEDIUM, or HIGH function. After selecting the desired function, touch the TIMER/PRESET button. The Induction Cooktop will stop running. Adjust the preset time using the (+) or (-) buttons until desired preset time is reached. The display area will blink for a few seconds while your Induction Cooktop is setting the desired amount of time. The preset timer will then automatically begin counting down. You will see the display section show the temperature of the function and timer intermittently. The preset timer can go up to 6 hours. When the preset timer is up, your Induction Cooktop will automatically begin cooking at the desired temperature of the initial selected function.

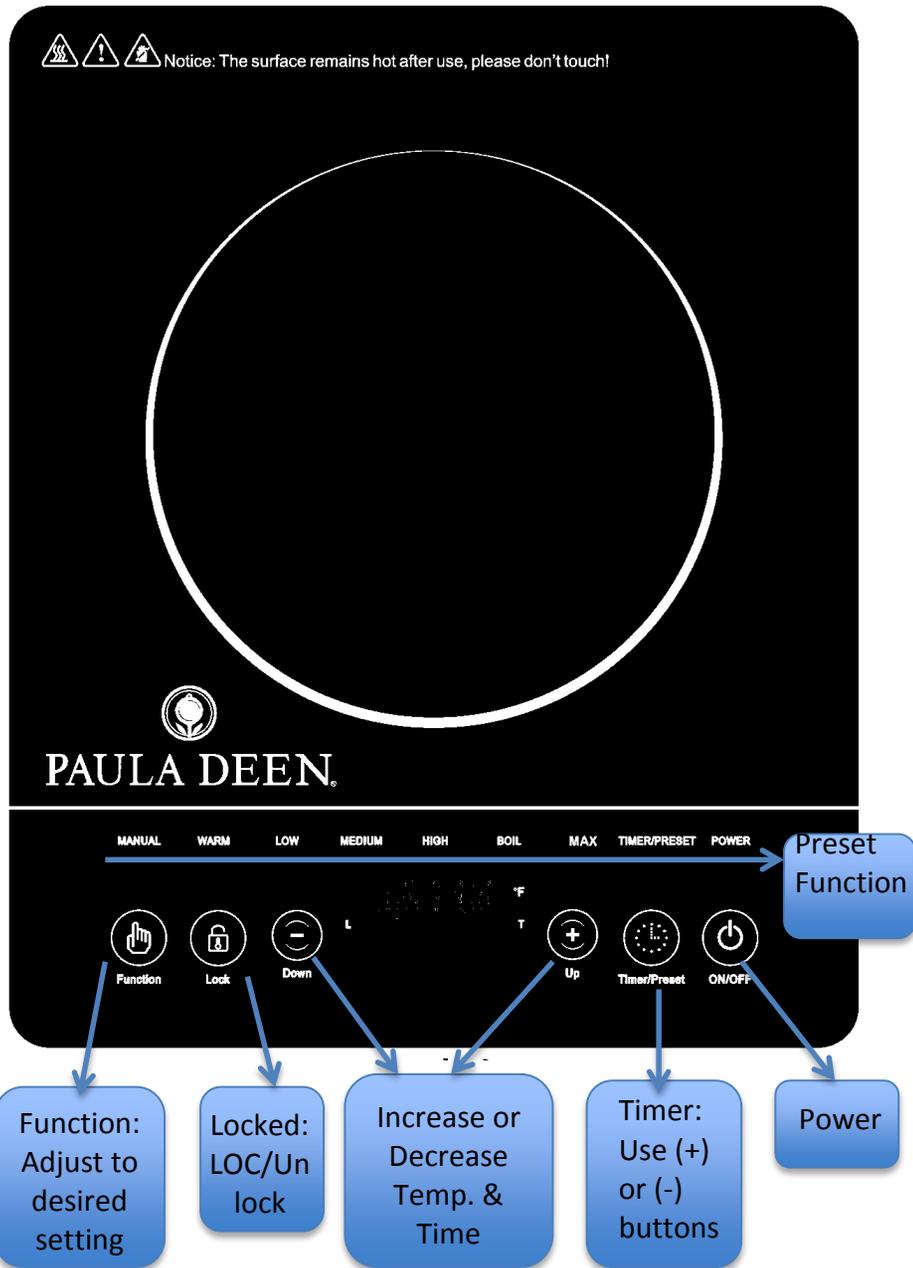

## ERROR CODES

Please refer to the below error codes for more information.

ERROR MESSAGE	SOLUTION
The power button does not light when you press the ON/OFF button.	Check if the unit is plugged in correctly. Check the circuit is functioning correctly.
The Induction Cooktop makes a beep sound.	Check if cookware is induction compatible. Check if cookware is positioned correctly on the Cooktop surface.
E0 Displays in the LED	Check if the cookware is induction compatible.
E1 Displays in the LED	Check connection to the power source.
E2 Displays in the LED	Check if voltage is too high.
E3 Displays in the LED	Check if there is any liquid in the cooking vessel and add if needed.
E4 Displays in the LED	Thermostat may be broken.
E5 Displays in the LED	The Cooktop may suddenly stop heating. Check if the fan area is blocked, as this is a sign that the Cooktop is over heating. The fan may be broken. Turn the Cooktop power off for 10 minutes and try again.
E6 Displays in the LED	Check for damage to the Cooktop.
E7 Displays in the LED	Check the power cord.

## PRESET FUNCTIONS

- **MANUAL:** When ready to use Induction Cooktop, Plug in. Touch the ON/OFF button to turn on. To select the MANUAL function, touch the FUNCTION button. You will see a blue light highlighting the MANUAL function. You may then adjust the temperature by using the indicated (+,-) up and down buttons to your desired temperature. Temperature levels adjust to and from 120°F, 212°F, 266°F, 320°F, 374°F, 428°F, 464°F, and 518°F and can be adjusted at any time during cooking while in the MANUAL, BOIL, and MAX functions. The timer can be set up to 6 hours while using the MANUAL function.
- **WARM:** To use this preset function press the FUNCTION button until WARM is highlighted with a blue light. This will turn on the WARM function. You cannot change the temperature when using this function. WARM is 120° F, the Induction Cooktop will stay at this temperature for 6 hours unless you set the preset timer to a different time or an error occurs (check ERROR CODES chart).
- **LOW:** To use this preset function press the FUNCTION button until LOW is highlighted by a blue light. This will turn on the LOW function. You cannot change the temperature when using this function. LOW is 212° F, the Induction Cooktop will stay at this temperature for 6 hours unless you set the preset timer to a different time or an error occurs (check ERROR CODES chart).
- **MEDIUM:** To use this preset function press the FUNCTION button until MEDIUM is highlighted by a blue light. This will turn on the MEDIUM function. You cannot change the temperature when using this function. MEDIUM is 320° F, the Induction Cooktop will stay at this temperature for 6 hours unless you set the preset timer to a different time or an error occurs (check ERROR CODES chart).
- **HIGH:** To use this preset function press the FUNCTION button until HIGH is highlighted by a blue light. This will turn on the HIGH function. You cannot change the temperature when using this function. HIGH is 428° F, the Induction Cooktop will stay at this temperature for 6 hours unless you set the preset timer to a different time or an error occurs (check ERROR CODES chart).
- **BOIL:** The BOIL function will start at 464°F. You can adjust the temperature by using the (+, -) buttons. The induction cooktop will stay at this temperature for 6 hours unless you adjust the timer or an error occurs (check ERROR CODES chart).
- **MAX:** The MAX function will start at 518°F. You can manually adjust the temperature by using the (+, -) up and down buttons. The induction cooktop will stay at this temperature for 6 hours unless you adjust the timer or an error occurs (check ERROR CODES chart).

## TOUCH CONTROLS

- **FUNCTION:** With the power on and induction capable cookware within the cooking surface, touch the FUNCTION button to move to the different functions. When a preset function is selected, the preset function will light up and the LED will display the setting temperature.
- **LOC:** Touch and hold the LOC button, until LOC is displayed on the LED screen to lock all controls and preset features. When locked, LOC will display in the LED screen. Press and hold again to unlock.
- **DOWN (-):** Touch the DOWN (-) button to decrease time/ temperature.
- **UP (+):** Touch the UP (+) button to increase the time/ temperature.
- **TIMER/ PRESET:** Touch the TIMER/PRESET button to set the timer or preset timer. Use the UP and DOWN buttons to adjust to the desired time. The maximum time is 6 hours.
- **ON/OFF:** Touch the ON/OFF button to turn the Induction Cooktop power on or off.

NOTE: There is a small compartment located on the underside of the unit that can be used for storage. This compartment does not affect the function of the cooktop.

