



PAULA DEEN

KITCHEN ELECTRICS



BREAKFAST STATION

Instructions

MODEL HX-5091

Meet Paula Deen



Culinary icon Paula Deen is a self-made entrepreneur who learned her savory secrets from her grandmother. She started her career in the food industry with a small catering company called The Bag Lady, but business quickly outgrew her home kitchen. Taking a leap of faith, she opened her first restaurant, The Lady and Sons, which has since become a tourist hot spot in Savannah, GA. With her huge personality, delectable recipes and heart of gold, Paula next found herself in talks with TV execs after a friend introduced her to some influential people in the business. The rest, as they say, is history.

In addition to her television success, Paula has sold more than 11,000,000 copies of her 14 cookbooks and launched the Paula Deen Network, an interactive digital portal that combines cooking, lifestyle and game shows with great recipes, meal-planning tools and more.


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed as follows:

- Read all instructions before first use.
- This appliance is designed for household use only.
- Do not place the appliance against a wall or against another appliance. Leave at least 5 inches of free space on the back and sides and 5 inches of free space above the appliance.
- Do not place anything on top of the appliance.
- Do not use the appliance for any purpose other than described in this manual.
- Do not leave the unit unattended when in operation.
- Any accessible surfaces may become hot during use.
- Do not place the appliance on or near combustible materials, such as a tablecloth or curtain.
- The appliance needs approximately 30 minutes to cool down before safely handling or cleaning.
- Do not immerse the housing in water or rinse under the tap due to the electrical and heating components.
- Keep all cords away from hot surfaces.
- Keep the appliance and its cords out of the reach of children.
- Do not use any unauthorized person to replace or fix a damaged main cord.
- Do not use the appliance if there is any damage to the plug, cord or other parts.
- Check that the voltage indicated on the appliance fits the voltage for your outlet.

- Do not put your hands near the breakfast maker while using as there could be hot steam.
- Do not connect appliance to an external timer switch.
- Do not let any liquid enter the appliance (aside from cooking liquids added to the pan) to prevent electric shock or short-circuiting.
- Do not touch the inside of the appliance while it is operating, as it will be very hot.
- Do not use with an extension cord, it must be plugged into a wall outlet.
- A short cord is provided to reduce the hazards of becoming entangled.
- Always unplug the appliance when not in use.
- Do not use this appliance outdoors.
- Never place the steamer tray or egg cooker lid directly onto the fry pan, only the egg tray with the rubber rim facing downward can be placed on the fry pan.
- **SAVE THESE INSTRUCTIONS.**

PARTS DESCRIPTION

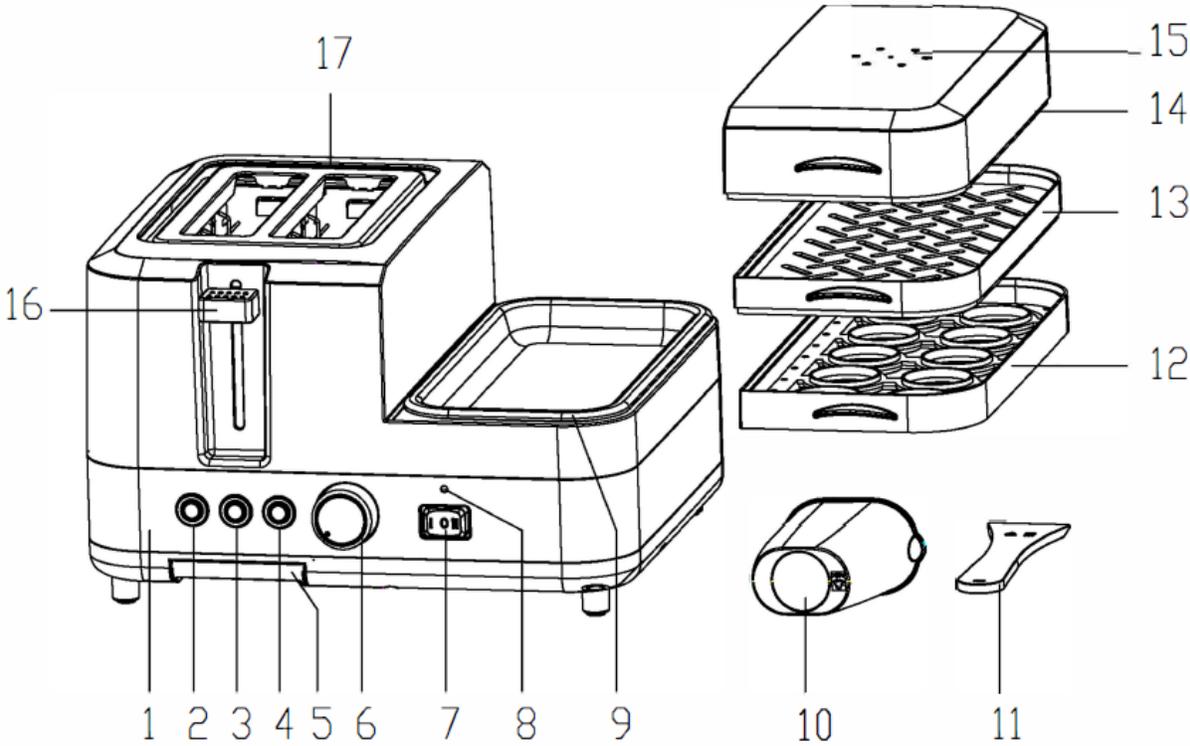

1	Control Panel	2	Reheat button	3	Frozen Button
4	Cancel Button	5	Crumb Tray	6	Browning Level Knob
7	Function Switch (Fry, Off, Cook)	8	Power Light		
9	Fry Pan	10	Measuring Cup	11	Spatula
12	Egg Boiling Tray	13	Steaming Tray	14	Clear Cover
15	Steam Vent	16	Lever	17	Toaster

BEFORE FIRST USE

1. Remove all packaging materials, stickers and labels.
2. Clean the accessories with hot water, dishwashing liquid, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a cloth.

USING THE APPLIANCE

Toasting:

Note: The maximum amount of bread that can be toasted at one time is two pieces.


1. Plug the appliance into a wall outlet.
2. Insert bread into the toaster slots and press the lever down.
3. The cancel indicator light will illuminate, this indicates the toaster is ready to use.
4. Turn the browning level knob to the desired toasting level (1 being the lightest and 7 being the darkest).
5. The toasting process will begin if you are not reheating or toasting frozen bread. If you are reheating bread, press the Reheat button at this time and the Reheat button will illuminate. If you are toasting frozen bread, press the Frozen button at this time and the Frozen button will illuminate.
6. When the toasting is complete, the toast will pop up and the cancel indicator light will turn off. To cancel toasting at anytime press the Cancel button.
7. Unplug the appliance when toasting is complete.

NOTE: Use caution when removing the toast as the toaster will be extremely hot.

EGG COOKING:

NOTE: The egg cooker can be used by itself or while the toaster is in use.

Tips for Egg Cooking: The below cooking times will be dependent upon the way you want the eggs to be cooked, the size, temperature, and freshness. We suggest using fresh medium size eggs.

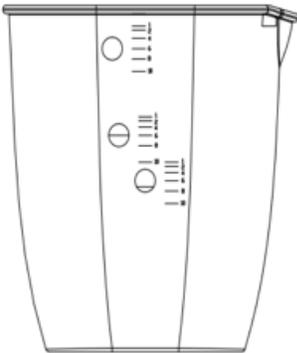

The measuring cup has markings for the amount of water required dependent upon the number of eggs and hardness. Use the sharp point on the bottom of the cup to pierce eggs for better cooking results. Note: This is a guide for cooking eggs.

Soft:  Firm:  Hard: 

Hardness	Description	Time
Soft	Liquid egg yoke	About 7-9 mins
Firm	Partially cooked egg yolk	About 10-12 mins
Hard	Cooked egg yolk	About 13-16 mins

Suggested Water Levels for Egg Cooking:

Hardness	Eggs	Water volume
Hard	1	5.1oz/150ml
	2	4.8oz/140ml
	4	4.5oz/130ml
	6	4.1oz/120ml
	10	3.8oz/110ml
Firm	1	3.8oz/110ml
	2	3.4oz/100ml
	4	3.1oz/90ml
	6	2.8oz/80ml
	10	2.4oz/70ml
Soft	1	2.1oz/60ml
	2	1.9oz/55ml
	4	1.7oz/50ml
	6	1.5oz/45ml
	10	1.4oz/40ml

To Cook:

1. Place the egg tray on the fry pan, with the rubber rim facing downward.
2. Using the measuring cup provided and previous chart to determine the amount of water needed to cook your eggs and pour the water into the pan.
3. Place desired amount of eggs on the tray. Note: The tray can hold up to 10 eggs at one time.
4. Place the lid over the egg tray.
5. Plug the appliance into a wall outlet and flip the switch to cook. The indicator light above the switch will illuminate.
6. The boiling of the eggs will be complete when the water has evaporated and the indicator light will turn off. Once complete, turn the switch to off.

STEAMER TRAY:

NOTE: The steamer tray can be used while the toaster is in use.

1. With the measuring cup provided, fill to the top and pour on to the fry pan.
2. Place the egg tray with the rubber rim facing down onto the fry pan, then place the steamer tray on top. Note: Never place the steamer tray directly on the fry pan always place on top of the egg tray.
3. Put food on the steamer tray and place the cover on top.
4. Plug appliance in and flip the switch to cook, the indicator light above will illuminate.
5. When the water has evaporated, the indicator light will turn off. If steaming is complete before the water has evaporated, flip the switch to off and unplug the appliance.

Note: Use caution when removing the lid as hot steam will escape.

FRY PAN:

NOTE: The fry pan can be used while the toaster is in use. The maximum amount of eggs that can be cooked at one time is two eggs.

1. Plug the appliance into a wall outlet.
2. Flip the switch to the fry option. The indicator light above the switch will illuminate. Allow the pan to heat up for a couple of minutes before adding the food.
3. Place the food on the pan and cook accordingly.
4. The indicator light will intermittently go on and off during the cooking cycle. Do not use sharp or metal utensils when cooking as this might scratch the surface of the pan. Never place the egg cooker lid on the fry pan while using the fry option.
5. Once cooking is complete, flip the switch to off. The indicator light will then turn off.
6. Remove food with a spatula and handle with care as it will be very hot.
7. Unplug the appliance.

CLEANING

- Remove the main plug from the wall outlet and let the appliance cool down for at least 30 minutes.
- Clean the appliance after every use. Do not clean the inside of the appliance with any metal kitchen utensils or abrasive cleaning materials.
- Empty out the crumb tray after use of the toaster. The crumb tray is located on the left hand side below the toaster and can be removed by sliding it outward.
- Wipe the outside of the appliance with a moist cloth.
- Clean the accessories with hot water, some liquid detergent and a non-abrasive sponge. You can remove any remaining food residue with degreasing liquid.

STORAGE

1. Unplug the cord.
2. Make sure all parts are clean and dry.

LIMITED ONE YEAR WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts arising under normal use and care in this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof-of-purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt showing item and date of purchase is an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model. Shipping and handling costs are not included for warranty replacements and are the responsibility of the customer.

To obtain service under the terms of this warranty, send an email to customercare@alliedrich.net or call our customer care department at 312-526-3760 (Monday- Friday 10:00AM-4:00PM CST). Please provide the model number listed on the bottom of this page when contacting us.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND DOES NOT COVER:

- Damages from improper installation.
- Damages in transit.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than authorized dealer or service center.
- Shipping and handling costs.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state to state.

Manufacturer does not assume responsibility for loss or damage for return shipment. We recommend that you keep your original packaging should you require repair service. Before returning product please contact our customer care department for return authorization. When returning product for repair please include your full name, return address, and daytime phone number. Also include a brief description of the problem you are experiencing and a copy of your sales receipt or other proof of purchase in order to validate warranty status.

MODEL HX-5091