FOR CUSTOMER SERVICE
QUESTIONS OR COMMENTS
PLEASE CALL
888.552.0033

GOURMIA

GOURMIA.COM

90 W

SLICE & SQUEEZE DUAL POWER JUICER

MODEL#GCJ-200

GOURMIA

SLICE & SQUEEZE DUAL POWER JUICER

MODEL#GCJ-200

Safety Precautions 4

Product Specs 6

Using Your Device 6

Storage and Disposal 8

Cleaning and Care 8

Warranty Details 9

USER MANUAL

SAFETY PRECAUTIONS:

Disclaimer: Manual instructions should always be read and implemented prior to product use. Manufacturer/ importer advisory board are not reliable for inadequate use due to instruction manual negligence or failure to follow direction.
This product is intended for indoor household use only!

Children: Keep this device out of the reach of children or other disqualified persons, since the misuse of contents and packaging materials may result in hazard or death.

- Always switch off appliance and disconnect power cord from electrical outlet when appliance is not in use.
- Never leave the appliance unattended during use.
- Electric shock prevention: Never attempt to repair the device on your own. In the event of product malfunction, contact customer service for assistance.
- Never immerse the motor base of this device in liquid, nor place under running water.
- Before connecting the appliance to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliance rating label.
- To avoid damaging the cord, do not squeeze, bend or chafe it on sharp edges. Keep it away from hot surfaces and open flames as well. Do not let the rotating blade touch the power cord.
- Avoid trip and fall accidents by placing the cord in a safe position.
- If an extension cord is used, its capacity needs to be suitable for the power consumed by the appliance.
- Never use accessories which are not recommended by the manufacturer. They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
- Always operate the appliance on a level, stable, clean and dry surface.
- Do not place heavy objects on top of the appliance. Do not place objects with open flames, e.g. candles, on top of or beside the appliance.
- Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not pull the power plug out of the electrical outlet by the power cord and do not wrap the power cord around the appliance.
- Disconnect the power plug from the electrical outlet before cleaning.
- Switch off the appliance before changing accessories or approaching parts which move during use.
- If the appliance should overheat, stop using the appliance and disconnect from its electrical outlet.
- Always turn the appliance off before disconnecting the power plug.
- This appliance must have both cones (3) loaded with fruit before use. Unit will not operate with pressure on one cone only.
- Do not use the appliance if the rotating sieve is damaged.
- Do not let the cord hang over the edge of a table or counter, become knotted or touch hot surfaces.
- This product must be installed according to national fittings standards.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.

PRODUCT SPECS

FIG 1

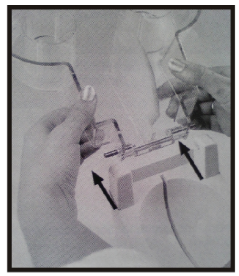

FIG 2

FIG 3

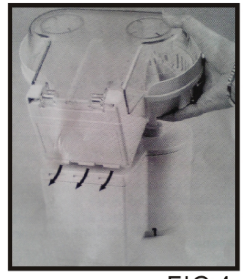

FIG 4

Technical Specification
Voltage: 220-240V~ 50Hz
Power: 90W

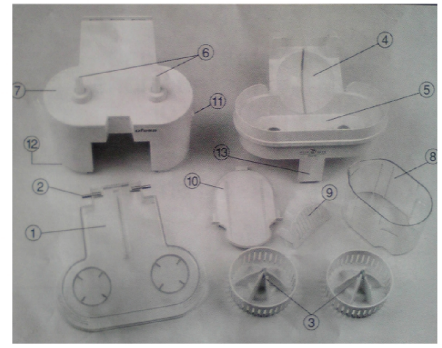

No.	Description	No.	Description
1.	Lid with cutting blade	7.	Motor base
2.	Lid locating rods	8.	Juice container
3.	Juicing cones with strainer baskets	9.	Pip and pulp sieve
4.	Slicing compartment	10.	Removable juice drip tray
5.	Juicing chamber	11.	On/off power switch
6.	Drive shafts	12.	Cord storage compartment
		13.	Front disassembly lever

USING YOUR DEVICE

HOW TO OPERATE

1) Plug into the AC plug into 220-240V~ socket oulet.
2) Press the power switch (11) on the side of motor base to the "I" position and make sure the juice container is in position.
3) Place an orange into slicing compartment (4) with top of orange facing left side of compartment (Figure 1). Lower lid (1) to cut orange through centre. Excess juice will run into juice container (8).
4) Place orange halves on cones one at a time. Remember, pressure on both cones simultaneously will begin operation.

USING YOUR DEVICE

5) Place another orange in the slicing compartment (4).
6) Lower lid (1) and, using both hands on either side of the lid, apply firm pressure. This will start the juicing operation and cut the whole orange in half. Juice will flow into container (8) below.
7) The appliance will not operate by pressure on one cone (3) only-both cones must be loaded with fruit.
8) When halves are fully juiced, discard peel and repeat steps 5 and 6 until the juice container (8) is full (approximately 500ml).
9) Do not fill above the max. fill line.
10) Slide out the juice container (8) to serve the juice.
11) The removable sleeve (9) will strain the excess pulp and any pips from the juice. If your prefer a higher fibre drink simply remove the sleeve. The drip tray (10) will catch any juice remaining in the juicing chamber (8).
12) It is recommended to rinse the cones (3) and juicing chamber (8) periodically when preparing large quantities of oranges. If the juicer stops operating during juicing, remove the cones (3) and rinse the juicing chamber (5) to remove excess pips which may lodge underneath the cones (3) and prevent the unit from operating.

DISASSEMBLING

1) Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use
2) Slide out juice container (8) and drip tray (10)
3) To remove slid (1), open fully and apply pressure with thumbs as shown in (Figure 2). Lid (1) will unclip from the juicing chamber together.
4) To prevent juice from dripping, remove the cones (3) and juicing chamber (5) together, operating the front lever (13)
5) Hold motor base (7) with one hand, and with the other grasp the juicing chamber (5) at the front and pull up over the drive shafts (6). The cones (3) will lift off with the juicing chamber (5) as shown in (Figure 3).
6) The cone (3) may also be removed separately from the juicing chamber (5) by simply lifting them off the drive shafts (6).
7) The juice drip tray (10) simply slides out for cleaning.

REASSEMBLING

1) Replace the juicing chamber (5) onto the motor base (7) by sliding the protruding lugs at the back of the juicing chamber into the slots at the back of the motor base as shown in Figure 4.
2) Place cones (3) onto drive shafts (6).
3) Place the lid (1) in its original location.
4) Slide the drip tray (10) into position along guide rails, clipping rear tab into position.

5) The juice container (8) will then slide into position for storage.

STORAGE AND DISPOSAL

Storage:

• Store the appliance in a cool, dry and clean place, out of the reach of children and pets.

• Please keep the packaging for transporting the appliance or for storing your appliance when not in use for a prolonged time period.

Product Disposal:

This product may not be disposed of along with with ordinary household waste, as electrical and electronic waste must be disposed of separately.

Contact your retailer, distributor or the municipal authorities for further information on product disposal.

CLEANING AND CARE

• Always disconnect the juicer from the power supply if it is left unattended and before assembling, disassembling or cleaning.
• All removable parts may be washed by hand in hot soapy water.
• Wash the parts which are going to be in contact with food with soapy water.
• Due to the strong natural colorings in the peel of citrus fruits, the juicing chamber (5) may discolour.
• To clean, spread the affected area with a thick paste of bicarbonate of soda and water. Allow to stand overnight and wash in hot soapy water.
• Do not place parts in harsh cleaning agents which may adversely affect the parts.

WIPE THE MOTOR BASE (7) WITH A DAMP CLOTH. DO NOT IMMERSE IT IN WATER OR ANY OTHER LIQUID.

WARRANTY DETAILS

This product is guaranteed under the premise of a 1 year limited warranty period, applicable to the original purchaser and not transferable to a third party user.

Repair or replacement of defective parts are at the seller's discretion. In the event that repair isn't possible, the seller will replace the product/ part. If product repair/ replacement won’t suffice, the seller has the option of refunding the cash value of the product or component returned.

Product defects not covered under the warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications, or repair by unauthorized parties. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.